LED MultiBeam Light

Instruction Manual

LED MultiBeam Light

WARNING

FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY BEFORE YOUR INITIAL START-UP!

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the equipment.

- Never let the power-cable come into contact with other cables. Handle the power-cable and all mains voltage connections with particular caution!
- Never remove warning or informative labels from the equipment.
- Do not open the equipment and do not modify the equipment.
- Do not connect this equipment to a dimmer-pack.
- Do not switch the equipment on and off in short intervals, as this will reduce the system's life.
- Only use the equipment indoors.
- Do not expose to flammable sources, liquids or gases.
- Always disconnect the power from the mains when equipment is not in use or before cleaning! Only handle the power-cable by the plug. Never pull out the plug by pulling the power-cable.
- Make sure that the available voltage is between 110v/240v.
- Make sure that the power-cable is never crimped or damaged. Check the equipment and the power-cable periodically.
- If the equipment is dropped or damaged, disconnect the mains power supply immediately. Have a qualified engineer inspect the equipment before operating again.
- If the equipment has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation might damage the equipment. Leave the equipment switched off until it has reached room temperature.
- If your product fails to function correctly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Prolight dealer for service.
- Only use fuses of same type and rating.
- Repairs, servicing and power connection must only be carried out by a qualified technician. THIS UNIT CONTAINS NO USER SERVICEABLE PARTS.
- WARRANTY; One year from date of purchase.

CAUTION! TAKE CARE USING THIS EQUIPMENT!HIGH VOLTAGE-RISK OF ELECTRIC SHOCK!!

Technical Specifications:

Voltage: AC110V-240V/50Hz-60Hz
Power: 30W
Lamp: One pcs 9W R.G.B Color LED
Channel: 6CH
Control mode: DMX512 mode, Sound active mode, Auto Run, Master/Slave.
Packing size: L26×H26×W24cm
N.W: 2.5kg
G.W: 2.8k

Overview

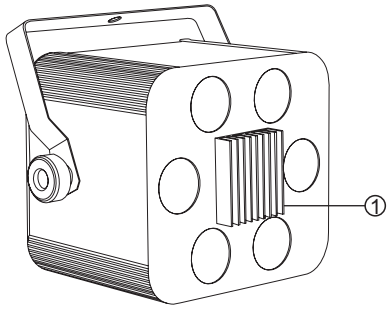

Front

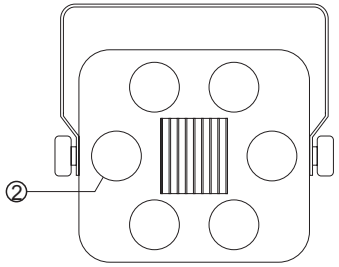

Back

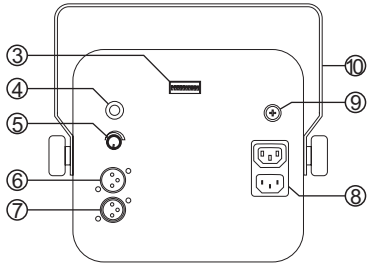

Identification

1.Aluminum Cooling Fin	2.Lens
3.Diswitches	4.Mic
5.Sound sensitivity control	6.DMX In
7.DMX Out	8.Powe
9.Fuse	10.Hanging bracket

DMX Dip Switch Quick Reference Chart

Dip Switch Position

DMX DIP SWITCH SET 0=OFF 1=ON																					
					#9	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1
					#8	0	0	0	0	1	1	1	1	0	0	0	0	1	1	1	1
					#7	0	0	1	1	0	0	1	1	0	0	1	1	0	0	1	1
					#6	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1
#1	#2	#3	#4	#5																	
0	0	0	0	0			32	64	96	128	160	192	224	256	288	320	352	384	416	448	180
1	0	0	0	0		1	33	65	97	129	161	193	225	257	289	321	353	385	417	449	481
0	1	0	0	0		2	34	66	98	130	162	194	226	258	290	322	354	386	418	450	482
1	1	0	0	0		3	35	67	99	131	163	195	227	259	291	323	355	387	419	451	483
0	0	1	0	0		4	36	68	100	132	164	196	228	260	292	324	356	388	420	452	484
1	0	1	0	0		5	37	69	101	133	165	197	229	261	293	325	357	389	421	453	485
0	1	1	0	0		6	38	70	102	134	166	198	230	262	294	326	358	390	422	454	486
1	1	1	0	0		7	39	71	103	135	167	199	231	263	295	327	359	391	423	455	487
0	0	0	1	0		8	40	72	104	136	168	200	232	264	296	328	360	392	424	456	488
1	0	0	1	0		9	41	73	105	137	169	201	233	265	297	329	361	393	425	457	489
0	1	0	1	0		10	42	74	106	138	170	202	234	266	298	330	362	394	426	458	490
1	1	0	1	0		11	43	75	107	139	171	203	235	267	299	331	363	395	427	459	491
0	0	1	1	0		12	44	76	108	140	172	204	236	268	300	332	364	396	428	460	492
1	0	1	1	0		13	45	77	109	141	173	205	237	269	301	333	365	397	429	461	493
0	1	1	1	0		14	46	78	110	142	174	206	238	270	302	334	366	398	430	462	494
1	1	1	1	0		15	47	79	111	143	175	207	239	271	303	335	367	399	431	463	495
0	0	0	0	1		16	48	80	112	144	176	208	240	272	304	336	368	400	432	464	496
1	0	0	0	1		17	49	81	113	145	177	209	241	273	305	337	369	401	433	465	497
0	1	0	0	1		18	50	82	114	146	178	210	242	274	306	338	370	402	434	466	498
1	1	0	0	1		19	51	83	115	147	179	211	243	275	307	339	371	403	435	467	499
0	0	1	0	1		20	52	84	116	148	180	212	244	276	308	340	372	404	436	468	500
1	0	1	0	1		21	53	85	117	149	181	213	245	277	309	341	373	405	437	469	501
0	1	1	0	1		22	54	86	118	150	182	214	246	278	310	342	374	406	438	470	502
1	1	1	0	1		23	55	87	119	151	183	215	247	279	311	343	375	407	439	471	503
0	0	0	1	1		24	56	88	120	152	184	216	248	280	312	344	376	408	440	472	504
1	0	0	1	1		25	57	89	121	153	185	217	249	281	313	345	377	409	441	473	505
0	1	0	1	1		26	58	90	122	154	186	218	250	282	314	346	378	410	442	474	506
1	1	0	1	1		27	59	91	123	155	187	219	251	283	315	347	379	411	443	475	507
0	0	1	1	1		28	60	92	124	156	188	220	252	284	316	348	380	412	444	476	508
1	0	1	1	1		29	61	93	125	157	189	221	253	285	317	349	381	413	445	477	509
0	1	1	1	1		30	62	94	126	158	190	222	254	286	318	350	382	414	446	478	510
1	1	1	1	1		31	63	95	127	159	191	223	255	287	319	351	383	415	447	479	511

Dip Switch position **DMX Address**

Notice:

• Be sure to follow figures 2 & 3 when making your own cables. Do not connect the cable's shield conductor to the ground lug or allow the shield conductor to come in contact with the XLR's outer casing. Grounding the shield could cause a short circuit and erratic behaviour.



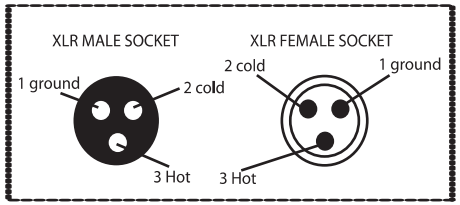

FIGURE 3

XLR Pin Configuration
Pin 1 = Ground
Pin 2 = Negative
Pin 3 = Postive

FIGURE 2

Special Note: Line termination:

• When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behaviour.

Termination reduces signal transmission problems and interferance. it is always advisable to connect a DMX terminal, (resistance 120 Ohm 1/4 W) between pin 2 (DMX-) and pin 3 (DMX+) of the last fixture.

Using a cable terminator (part number CABL90) will decrease the possibilities of erratic behaviour.

5-Pin XLR DMX Connectors:

• Some manufactures use 5-pin XLR connectors for data transmission in place of 3-pin. 5-Pin XLR fixtures may be implemented in a 3-pin XLR DMX line. When inserting standard 5-pin XLR connectors in to a 3-pin line a cable adaptor must be used. The Chart below details the correct cable conversion.

3- Pin XLR to 5-PIN XLR Conversion

Conductor	3-Pin XLR out	5-Pin XLR in
Ground shield	Pin 1	Pin 1
Negative (-)	Pin 2	Pin 2
Positive (+)	Pin 3	Pin 3

DMX MODE:

1.Setting mode: DMX mode is controlled by international standards DMX512, When setting DMX mode, the light need to be distributed a DMX channels.

2.Control and connecting: Connecting with XLR-XLR line from output of controller to the input of first light, and then connecting from output of first light to the input of second light. As the same steps to the last light. Take follow picture for example:

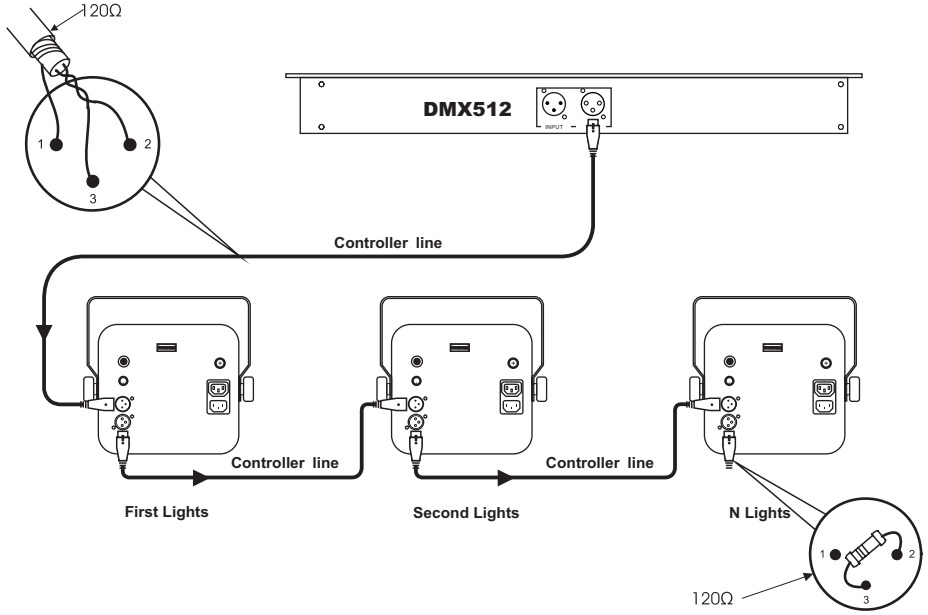

3.Before using of DMX512 control, please turn power on the light.

Note: Please keep in mind that the signal output of final lamp should be connected to the circuit plug, circuit plug has a 120 ohm resistance between 2 feet and 3 feet, the circuit plus can avoiding signal reflecting phenomenon during DMX 512 transmission.

DIP Switches Control Mode

Function	DIP Switches: ON	DIP Switches: OFF
Auto Run	10	1、2、3、4、5、6、7、8、9
Sound active	9、10	1、2、3、4、5、6、7、8
Master/Slave	1	2、3、4、5、6、7、8、9、10
DMX512	1	2、3、4、5、6、7、8、9、10

DMX512 Channels Chart

Channels	DMX512 Value	Effect
CH1	0-255	Right Rotating
	255-0	Left Rotating
CH2	0-1	Light open
	2-249	Strobe
	250-255	Turn on R.G.B color
CH3	0-255	Dimmer blue color from dark to bright
CH4	0-255	Dimmer green color from dark to bright
CH5	0-255	Dimmer red color from dark to bright
CH6	0-10	Light closed
	11-33	R.G.B color light rotating
	34-58	Blue color light rotating
	59-81	Green color light rotating
	82-105	G.B color light rotating
	106-129	Red color light rotating
	130-153	R.B color light rotating
	154-177	R.G color light rotating
	178-201	R.G.B color light rotating
	202-249	Colorful light chasing
	250-255	Sound active

DMX-512:

• DMX (Digital Multiplex) is a universal protocol used as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions form the controller to the fixture. DMX data is sent as serial data that travels from fixture to fixture via the DATA "IN" and DATA "OUT" XLR terminals located on all DMX fixtures (most controllers only have a data "out" terminal).

DATA Cable (DMX cable) requirements (for DMX operation):

• The Equinox Triclops can be controlled via DMX-512 protocol. The DMX address is set on the back of the unit. Your unit and your DMX controller require a standard 3-pin XLR connector for data input/output (figure 1).

Figure 1

Further DMX cables can be purchased from all good sound and lighting suppliers or Prolight dealers.
Please quote:
CABL10 – 2M
CABL11 – 5M
CABL12 – 10M

Also remember that DMX cable must be daisy chained and cannot be split.